

Lark M1 Upgrade Guide

1. Version Introduction

Released Date	Firmware Version	Version introduction	Download Link	Remark
27/9/2022	V1.7.3.4	<ul style="list-style-type: none">• Optimize noise reduction• Fixed another known problem	Google Drive Link: Download Path	

2. Updating Guide

2.1 Kindly Note:

- **It takes the risk to update the firmware, please avoid updating the device when the device is used for the important events**
- **To avoid the power being cut off suddenly during the updating, please make sure the device with enough power during updating.**
- **To avoid updating failure or error, please don't plug or unplug the USB Cable during updating**
- **Please feel free to contact our technical support engineer if the updating failure or error causes the malfunction of the device: support@hollyland.com**

2.2 Updating Tool

- Windows 10/11 PC
- USB-C Cable
- Upgrade File (Download from the link below)

2.3 Upgrade Steps


(1) Download the upgrade file: [Download Path](#)

Name	Date modified	Type	Size
ini	8/17/2022 4:42 PM	File folder	
6502_Upgrade_Tool_V1.0.0.2.exe	8/17/2022 1:15 PM	Application	17,131 KB
debuglog.log	8/17/2022 5:04 PM	Text Document	3 KB
hidapi.dll	8/17/2022 1:15 PM	Application extens...	47 KB
libusb-1.0.dll	8/17/2022 1:15 PM	Application extens...	207 KB
ucrtbase.dll	8/17/2022 1:15 PM	Application extens...	901 KB
ucrtbased.dll	8/17/2022 1:15 PM	Application extens...	1,609 KB
vcruntime140.dll	8/17/2022 1:15 PM	Application extens...	87 KB
vcruntime140d.dll	8/17/2022 1:15 PM	Application extens...	111 KB

(2) Make sure the TX is connect to the RX, then using a USB-C cable connect Lark M1 RX to the PC;



(3) Open the **【6502_Upgrade_Tool_V1.0.0.2.exe】**

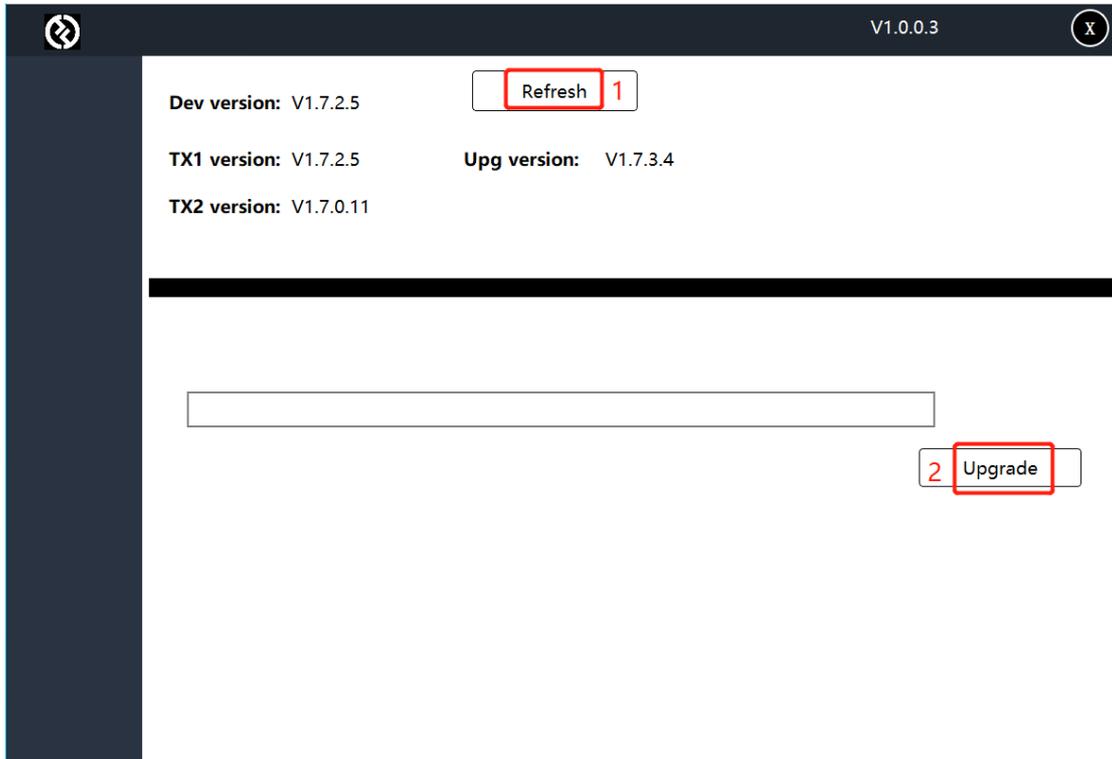

Then the RX will upgrade the TX in turns wirelessly. (The TX will turn purple when upgrading)



(4) The upgrade may take 20 mins, after upgrade successful, if it is not paired, you can pair it manually.

2.4 Special notes:

- The upgrade will take about 20 mins, please don't plug or unplug the USB Cable during updating.