


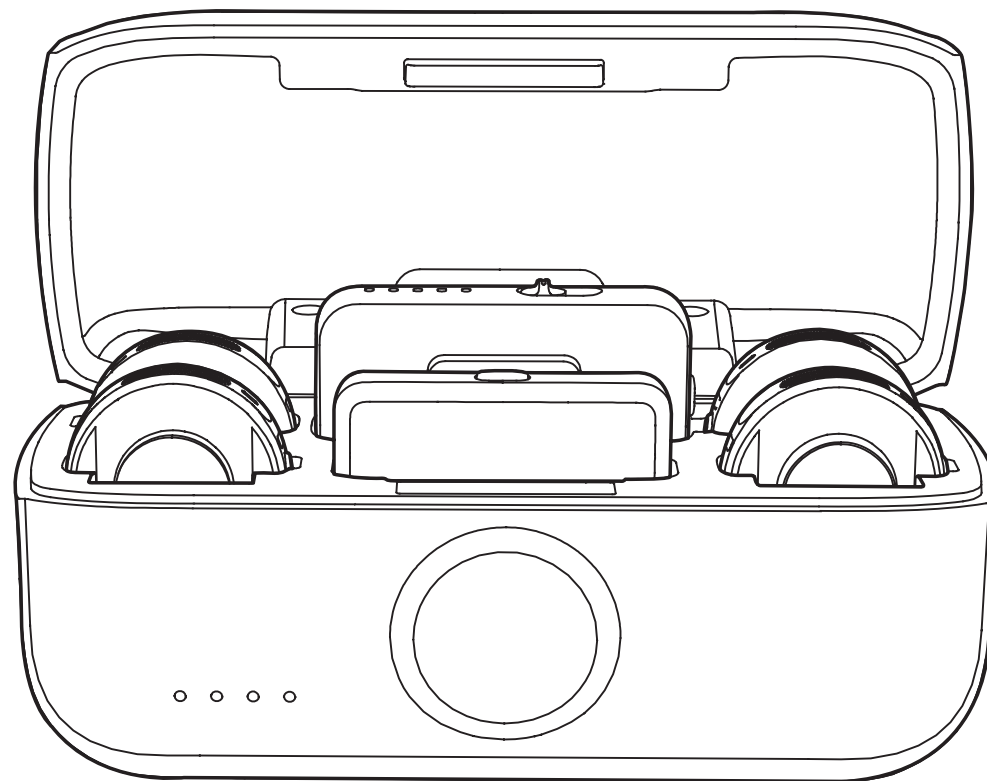

LARK M3

Wireless Microphone

Quick Guide

— Foreword —

Thank you for choosing the LARK M3 Wireless Microphones.

For detailed information, scan the QR code to access the User Manual available in English and other languages.

[EN] Please read this Quick Guide carefully before using the product. For detailed information, scan the QR code to access the User Manual available in English and other languages.

[FR] Veuillez lire attentivement ce guide rapide avant d'utiliser l'appareil. Pour plus d'informations, scannez le code QR pour accéder au manuel d'utilisation disponible en anglais et dans d'autres langues.

[DE] Bitte lesen Sie diese Kurzanleitung sorgfältig durch, bevor Sie das Produkt verwenden. Für weitere Informationen scannen Sie bitte den QR-Code, um die Bedienungsanleitung auf Englisch und in anderen Sprachen aufzurufen.

[IT] Leggere con attenzione questa Guida rapida prima di utilizzare il prodotto. Scansionare il codice QR per accedere al Manuale utente disponibile in inglese e altre lingue per informazioni più dettagliate.

[ES] Lea atentamente esta guía rápida antes de utilizar el producto. Para obtener información detallada, escanee el código QR y acceda al Manual de usuario, disponible en inglés y otros idiomas.

— Foreword —

[PT] Leia atentamente este Guia Rápido antes de usar o produto. Para obter informações detalhadas, leia o código QR para acessar o Manual do Usuário, disponível em inglês e outros idiomas.


[KR] 본 제품을 사용하기 전에 반드시 본 빠른 설명서를 읽어 주십시오. 상세한 정보는 QR 코드를 스캔하셔서 영문 및 기타 언어로 제공해 드리는 사용자 설명서를 확인하십시오.

[RU] Перед использованием внимательно изучите данное краткое руководство. Для получения подробной информации отсканируйте QR-код, чтобы открыть руководство пользователя на английском и других доступных языках.

[ID] Silakan baca Panduan Cepat ini dengan cermat sebelum menggunakan produk ini. Untuk informasi lebih lengkap, pindai kode QR untuk mengakses Panduan Pengguna yang tersedia dalam bahasa Inggris dan bahasa lainnya.




— First-Time Unboxing

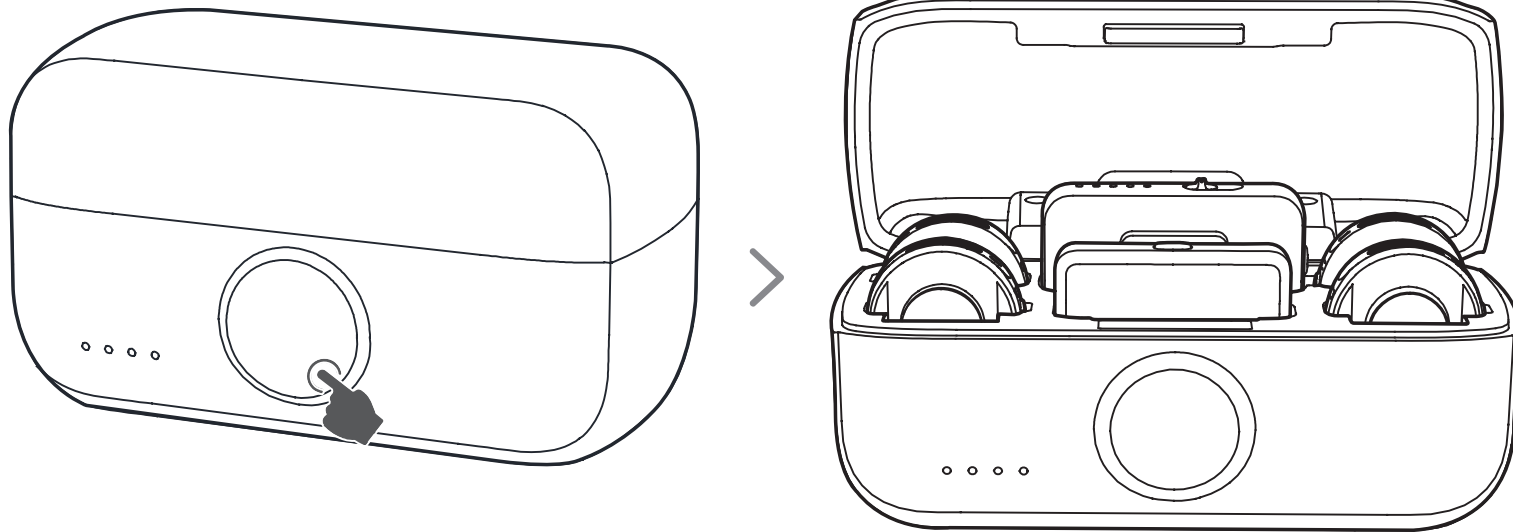


Press to open the charging case.

— Wearing Method

TX Wearing

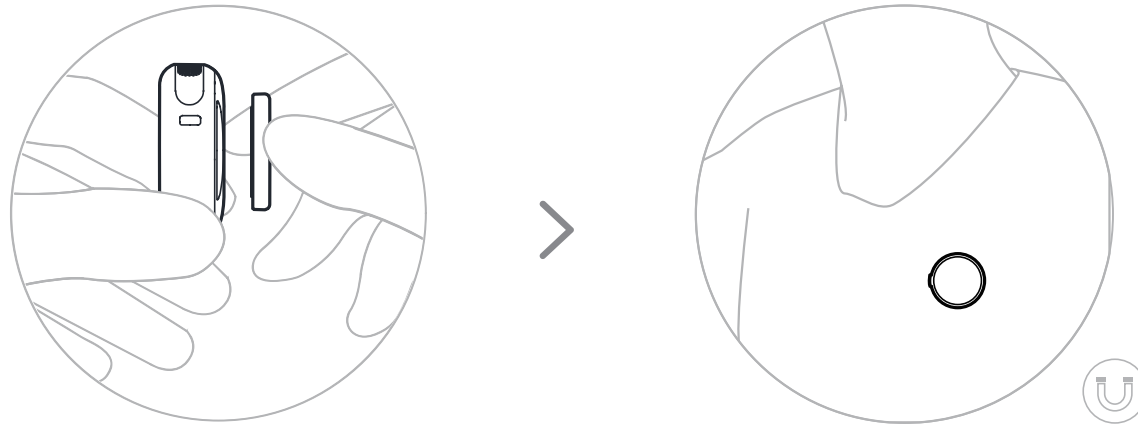


Furry Windshield Installation

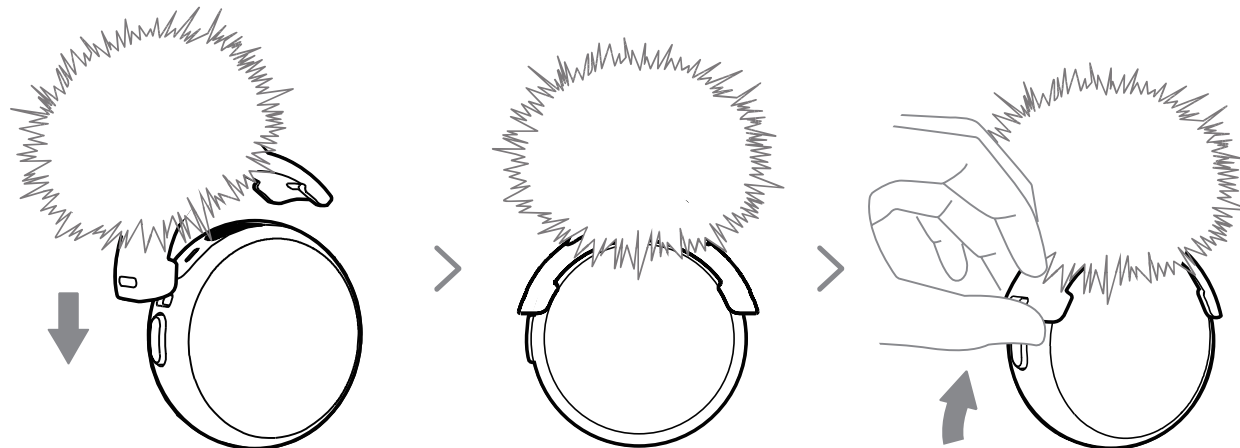

— First-Time Use

Before using the device for the first time, peel off the insulating protective films on the TX and the Camera RX.

Place both units back into the charging case and then remove them again to complete automatic power-on.

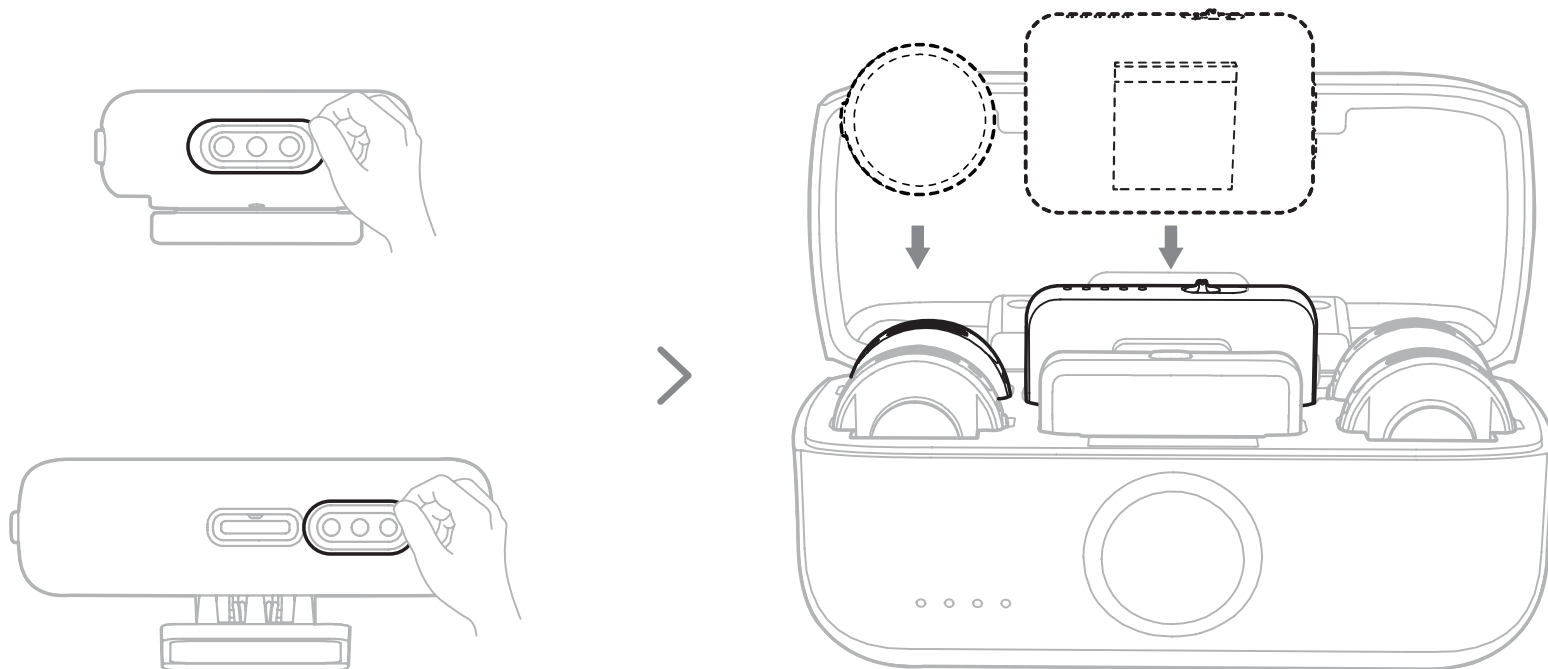


* The LARK M3 Combo 4TX&2RX Wireless Microphone is used as an example for demonstration.

— Phone Connection



When the phone battery is low, you can charge it via the USB-C receiver.

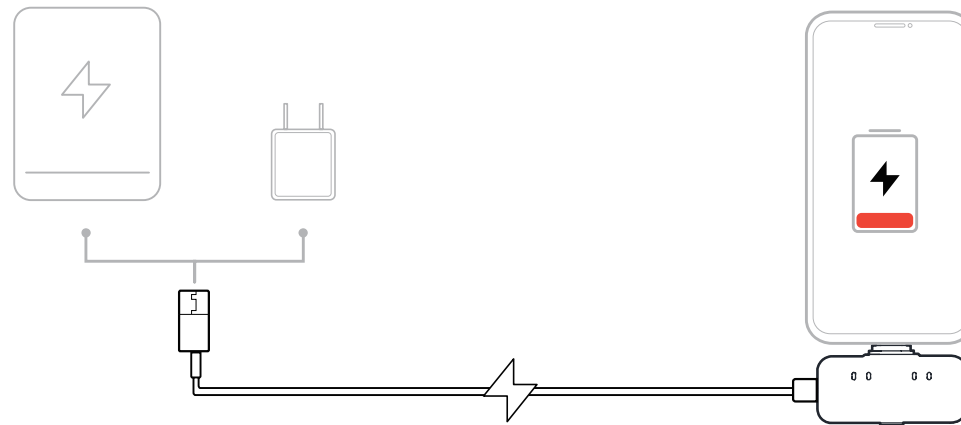


* Supported only on iPhone 15 series and later models.

— Camera Connection

Method 1


Connect the camera using the hot shoe adapter. The hot shoe adapter is sold separately.

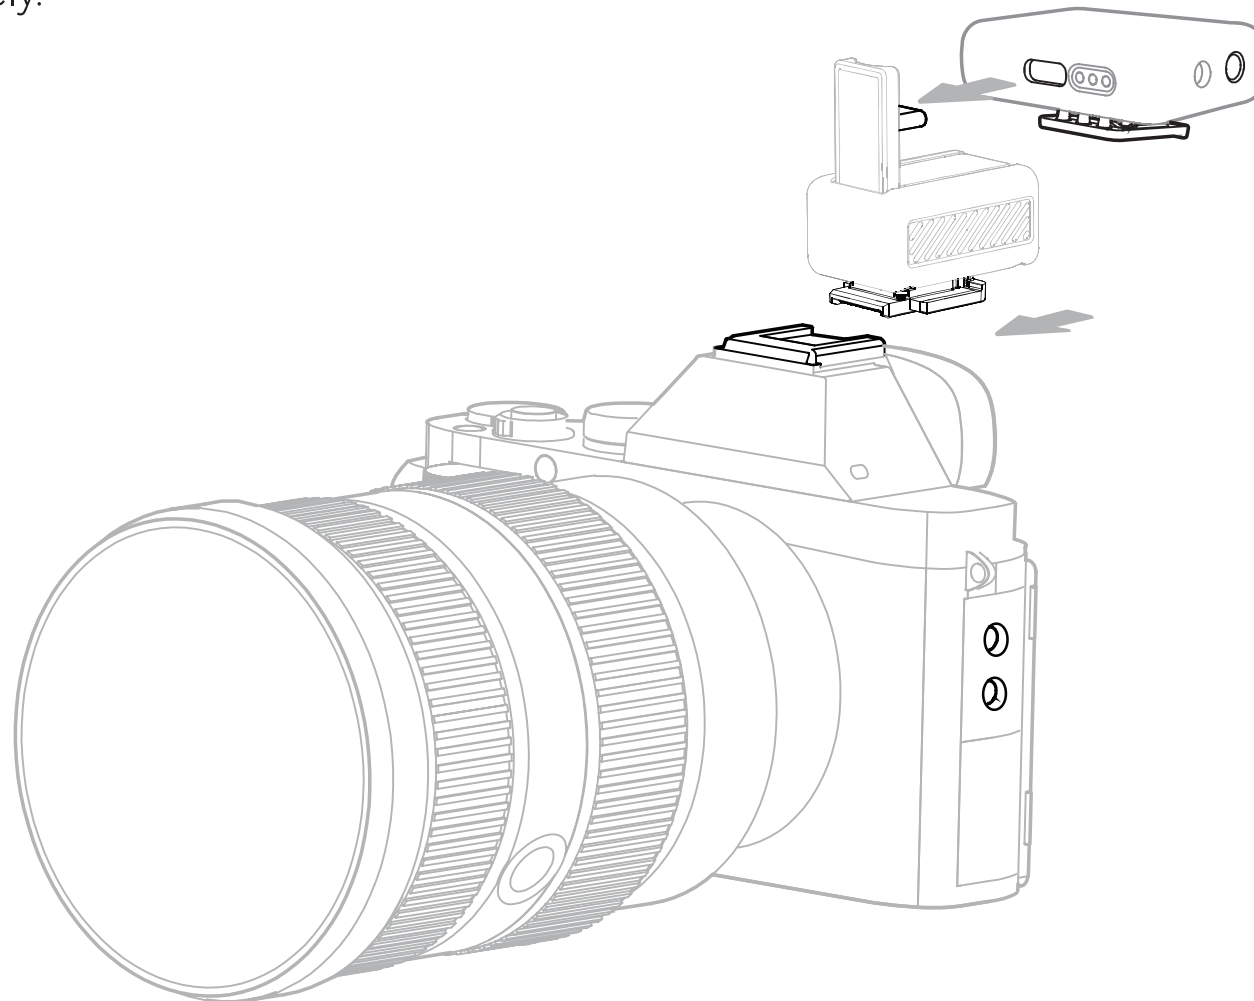

— Camera Connection

Method 2

Connect the camera using a 3.5 mm TRS to 3.5mm TRS cable.


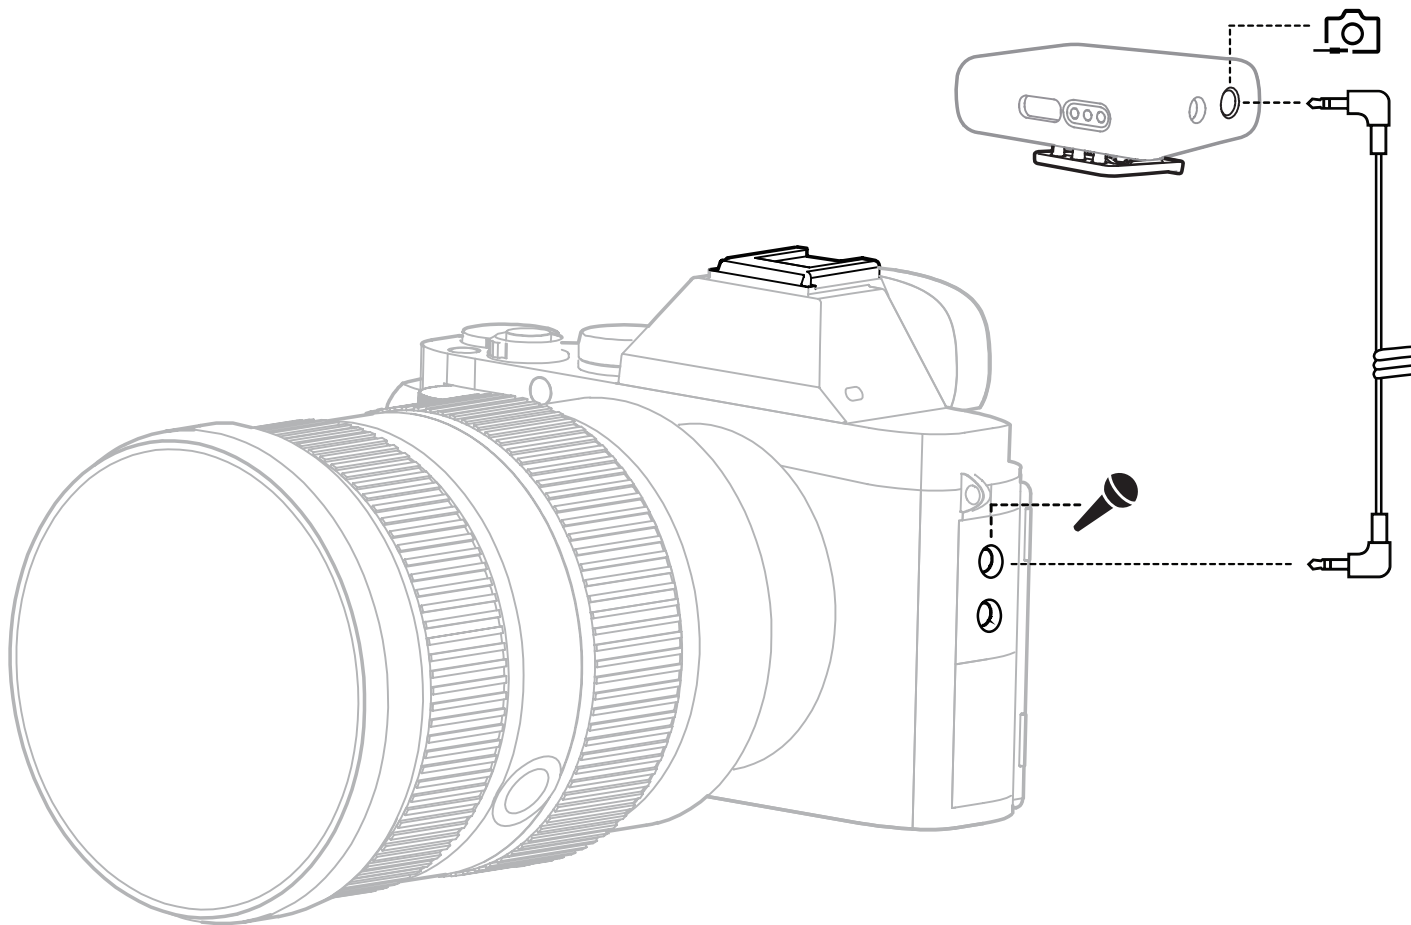


— Operating Modes —

4 TX & 4 RX Mode

The 4 TX & 4 RX mode is the default operating mode, supporting flexible pairing of up to 4 TX and 4 RX.

(In this mode, the receivers can be configured as either 4 USB-C RX units or 4 camera RX units.)

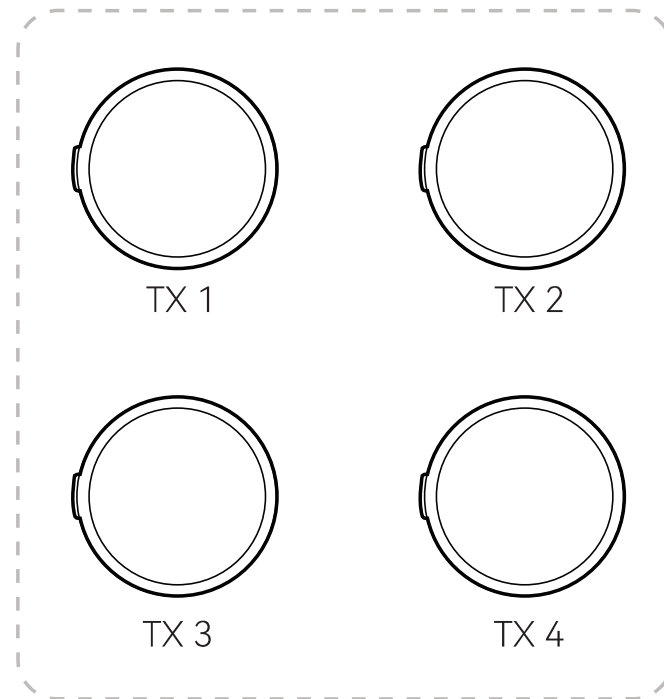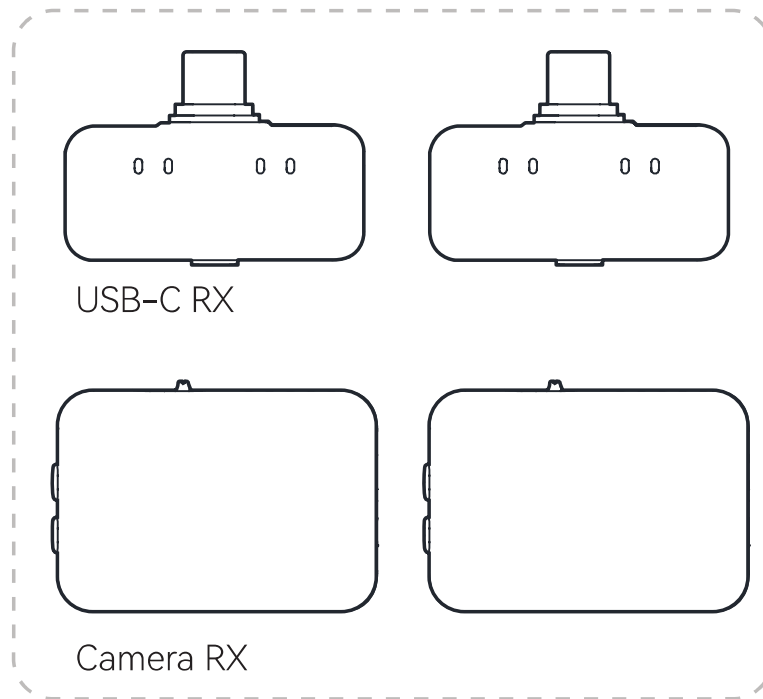


— Product Overview

TX




- ×1** : Noise Cancellation
- ×2** : Mute the TX
- ×3** : Start / Stop Recording
- 3S** : Power On / Off
- 6S** : Pairing (when powered off)

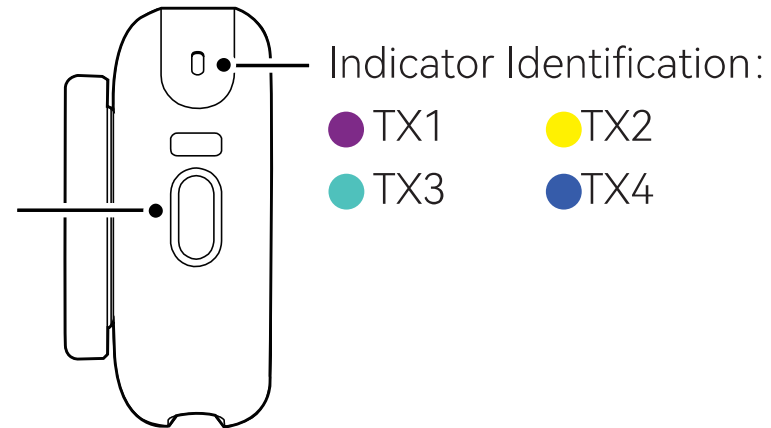

● --	Not Connected
● ----	Pairing
● —	Connected
● —	Noise Cancellation
● —	Mute

— Product Overview

USB-C Receiver

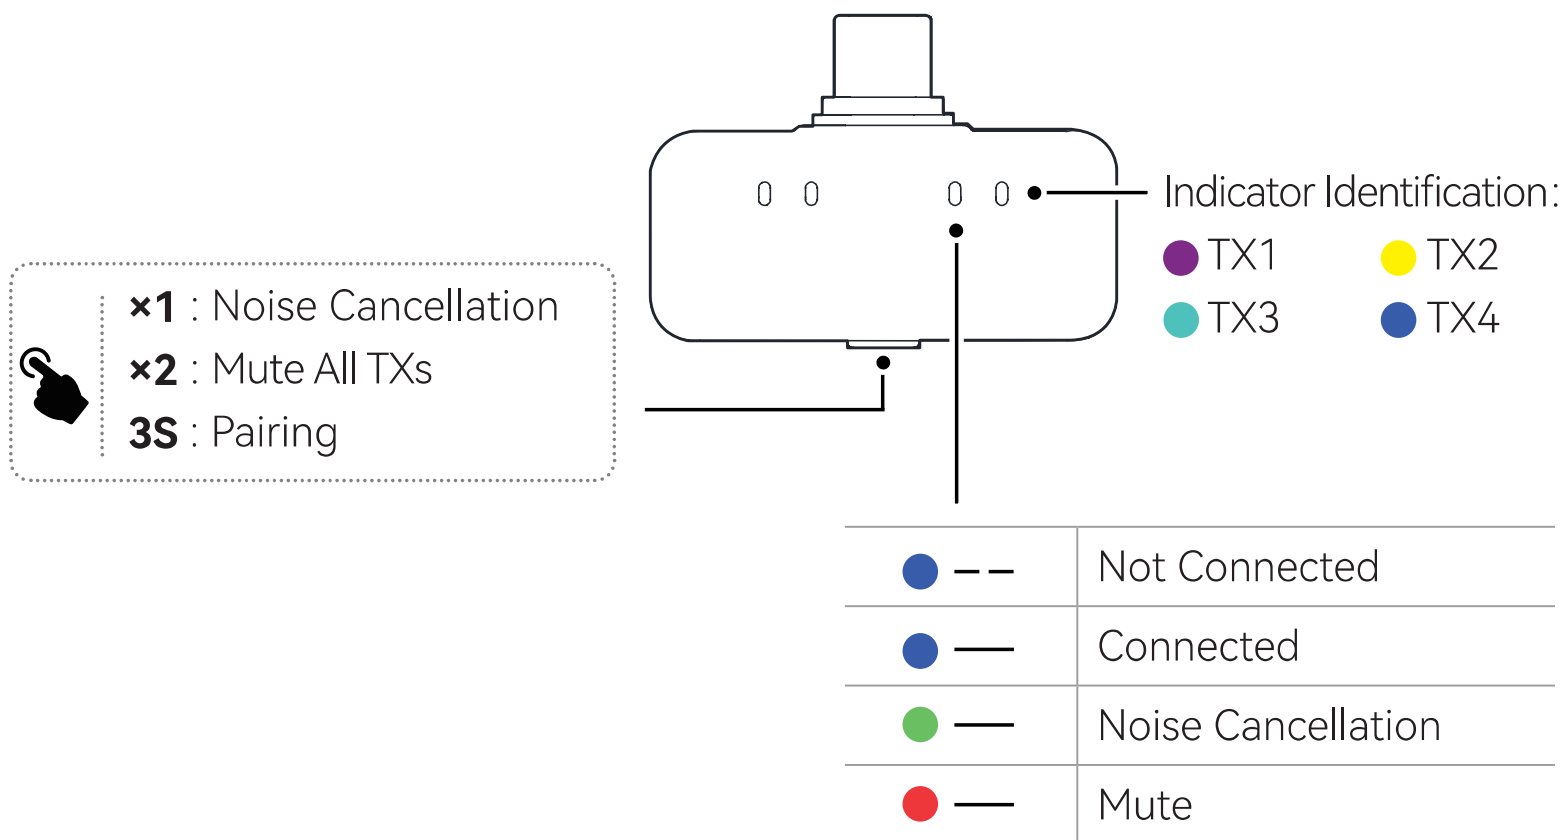

— Product Overview


Camera Receiver



- ×1** : Noise Cancellation
- ×2** : Mute All TXs
- 3S** : Power On / Off




- ×2** : Audio Channel Mode (Mono / Stereo / 4-Track)
- 3S** : Pairing

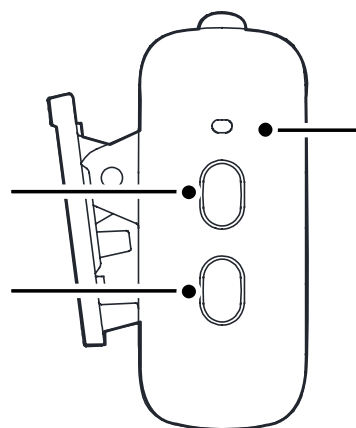


Channel Mode Indicator

-  Mono
-  Stereo
-  4-Track (4-Track is available only when connected via hot shoe or UCA output)

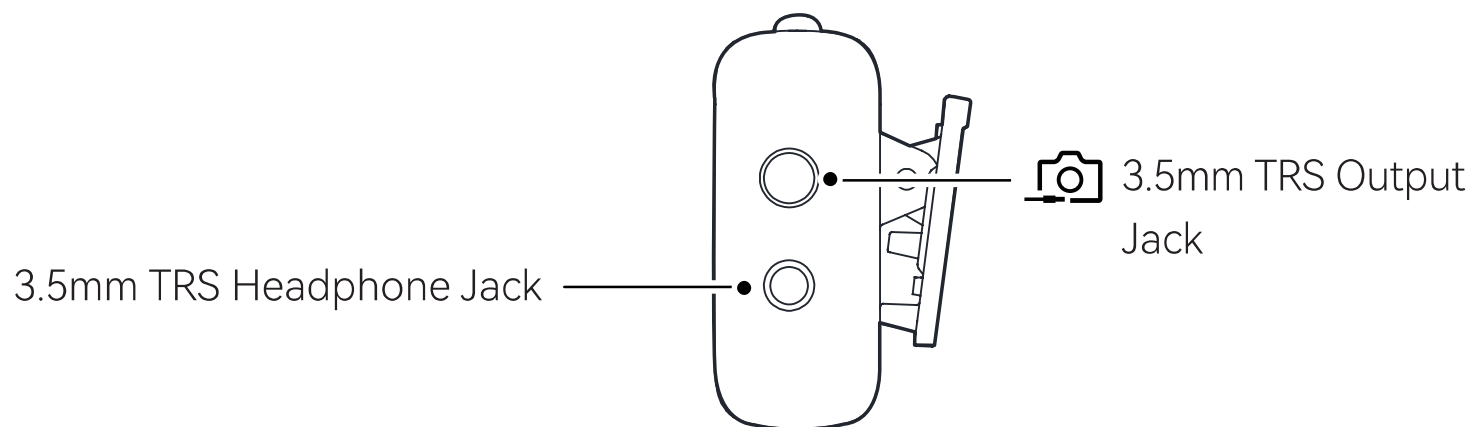

— Product Overview

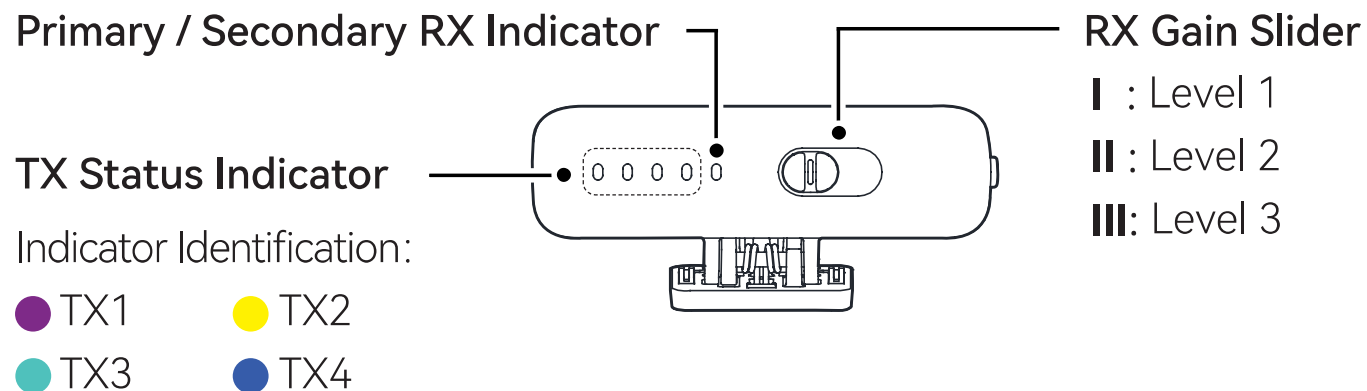

TX Status Indicator

● --	Not Connected
● —	Connected
● —	Noise Cancellation
● —	Mute

Primary / Secondary RX Indicator

● --	Not Connected
● —	Connected (Primary RX)
● —	Connected (Secondary RX)

— App Information —

HollyAudio

The HollyAudio App is available for download on Google Play Store and Apple App Store. You can also scan the QR code below to download the app.



The HollyAudio app is a perfect match for Hollyland wireless microphones. With the app, you'll have access to a range of smart features, such as parameter configurations and firmware updates, that work together seamlessly to enhance your microphone performance.



App



Requires Android 8.0 or higher



Requires iOS 12.0 or higher

— Support

If you encounter any problems in using the product or need any help, please contact Hollyland Support Team via the following ways:



Hollyland User Group



HollylandTech



HollylandTech



support@hollyland.com



HollylandTech



www.hollyland.com

Statement:

All copyrights belong to Shenzhen Hollyland Technology Co., Ltd. Without the written approval of Shenzhen Hollyland Technology Co., Ltd., no organization or individual may copy or reproduce part or all of any written or illustrative content and disseminate it in any form.

Trademark Statement:

All the trademarks are owned by Shenzhen Hollyland Technology Co., Ltd.

Note: Due to product version upgrades or other reasons, this Quick Guide will be updated from time to time. Unless otherwise agreed, this document is provided as a guide for use only. All representations, information, and recommendations in this document do not constitute warranties of any kind, express, or implied.

HOLLYVIEW

Powered by Hollyland

Shenzhen Hollyland Technology Co., Ltd.

8F, 5D Building, Skyworth Innovation Valley,
Tangtou Road, Shiyan Street, Baoan District, Shenzhen, 518108, China
Made in China